



Dynamax

Soil Moisture Range Chart

Field Capacity = highest moisture level - Do not exceed to avoid run-off

Irrigation Start Point = M.A.D. level - Start irrigation here to avoid the wilting point

Wilting Point = moisture level at which plants will begin to suffer

