

HPFM Pack Frame Installation Guide



Pack frame with back straps



(4) 8 inch velcro straps



(2) 12 inch velcro straps



The pack frame will be attached to the HPFM unit via (6) velcro straps. (2) 8 inch straps on top, (2) 12 inch straps in the middle, and (2) 8 inch straps on the bottom. See below diagram for attachment locations.



Attach two 8 inch straps through the top two cutouts on the HPFM cage and wrap around the top bar of the pack frame.



Attach two 12 inch straps through the enter bar on the HPFM cage and wrap around the enter bar of the pack frame. There are no cutouts in the cage for the middle straps, simply secure around the horizontal frame bar as shown.

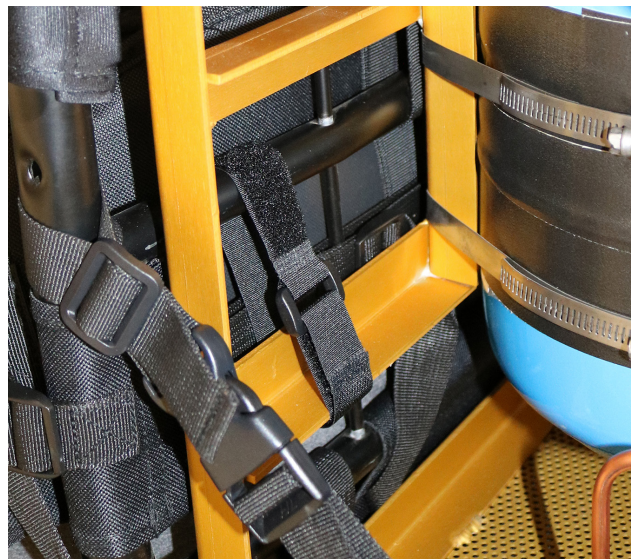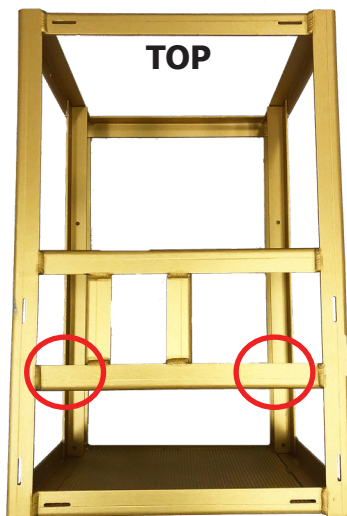

Attach the final two 8 inch straps through the bottom two cutouts on the HPFM cage and wrap around the bottom bar of the pack frame.

